



## Barcode Scanner Setup (DRX-4C Only)

1. Connect the scanner to the scale by plugging in the RJ connectror to the scanner and the RS232 connector to the scale.

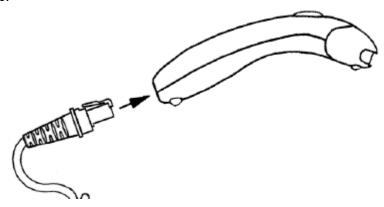

2. The RS232 port is located in the rear of the scale. Using a small flat-head screwdriver, tighten the connector screw to secure the cable and prevent it from unintentional plugging.

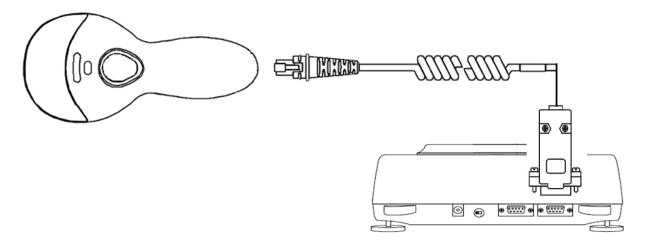

Note: Do not plug in a power adapter to the scanner. The scanner is powered by the scale. Plugging an external adaptor will damage the scanner.

