


## Chapter 21: Maintaining the Database (DRX-4C Only)


The database can be maintained by erasing a single memory location or the entire memory bank of stored NDC codes and average piece weights. To erase entries follow the steps below:

### 21.1 Delete All

1. Press the menu key and select Count (Count) by pressing the T key.

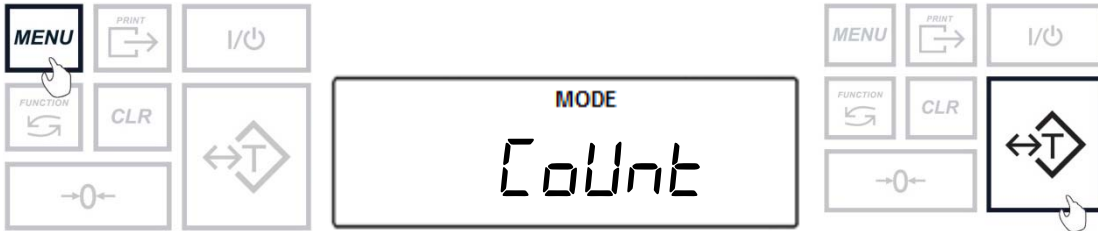

2. Select *data\_b* by pressing the T key.

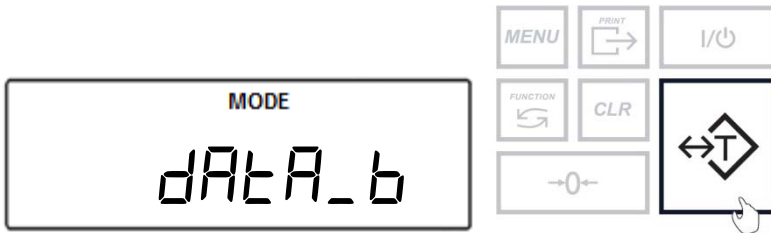


3. Select delete all (*del ALL*) by pressing the T key.



4. Select yes (*YES*) by pressing the T key to continue with erasing all entries in the database.




- Done (done) will be displayed to confirm the entire memory bank has been erased.

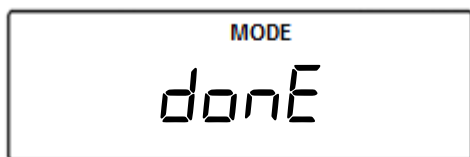


## 21.2 Delete Single Entry

- Press the menu key and select Count (Count) by pressing the T key.

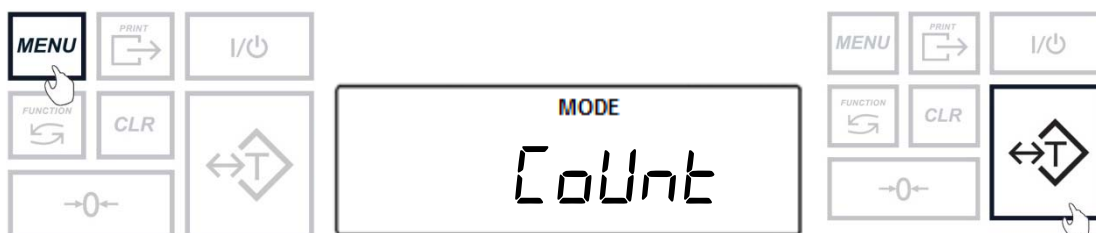


- Select data\_b by pressing the T key.

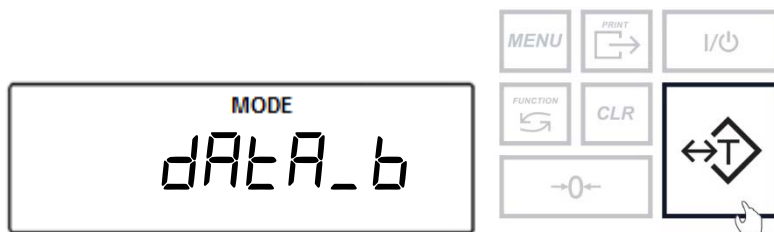

- Select delete one (del One) by pressing the T key.



- The display will read Scan (Scan) indicating to scan the NDC code that will be erased. At any time scan the NDC code.

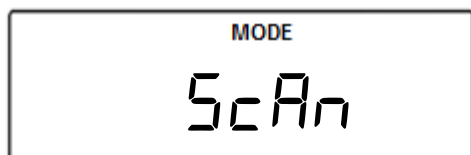

- After scanning the code, the scale will display Found (*FoUnd*) if this is an NDC code previously entered. Select yes (*YE5*) by pressing the T key to proceed with deleting the NDC code.



- The scale will delete the selected NDC code and will display done (*donE*) to confirm.

