

Hot Parts and Surfaces

Many parts of the Moisture Analyzer get very HOT during use. Familiarize yourself with these internal parts and always allow adequate time for cooling before touching or handling. Never touch any areas of the analyzer that with hot symbol.

The analyzer's venting grill can reach a temperature in excess of 100°C (212°F). NEVER touch the grill during or soon after use as severe burning may occur. The analyzer's housing can reach a temperature of 60°C (140°F).

Venting Grill can reach temperatures in excess of 100°C (212°F). NEVER touch the grill during or soon after use as severe burning may occur.

