


Unpacking the Torque Gauge and Getting Started

1. Carefully take the torque gauge out of the box.

2. Use the supplied hex key to firmly connect the fixture plate to the loadcell.



3. Install the clamping posts on the mounting rail by inserting them into the rail openings. Space the posts accordingly to diameter of the measured container.

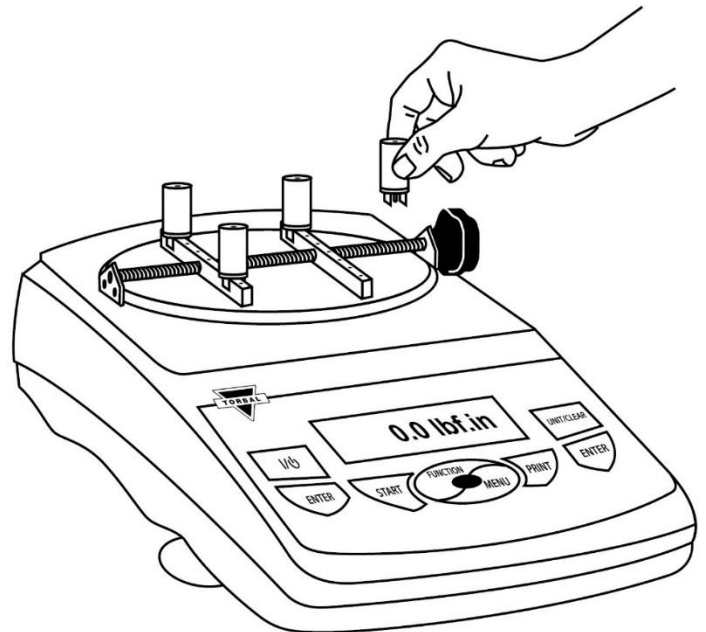

4. Connect the torque gauge to a power outlet by plugging the AC adapter into the 12V socket at the bottom of the unit. Once the AC adapter is connected to the torque gauge, plug the other end into a wall socket.