 
 


Taking Measurements: Quick Reference Guide

 
1. Press the *ON/OFF* key to turn the torque gauge ON.
2. Do not move or attempt to use the torque gauge as it is initializing. The torque gauge will power on in the last mode it was turned off.
3. Once the torque gauge is turned on, it is ready to use.

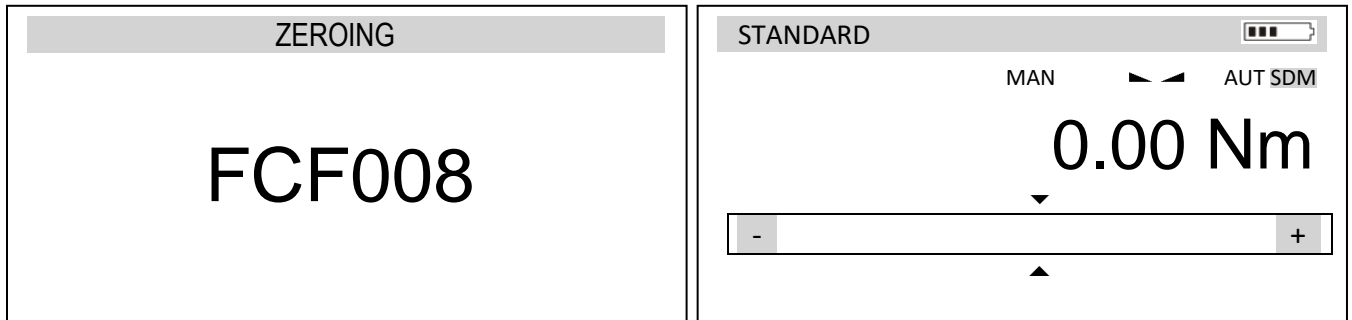




4. To select or change a mode press the Function key until a desired mode is highlighted. Only enabled modes are available for selection.

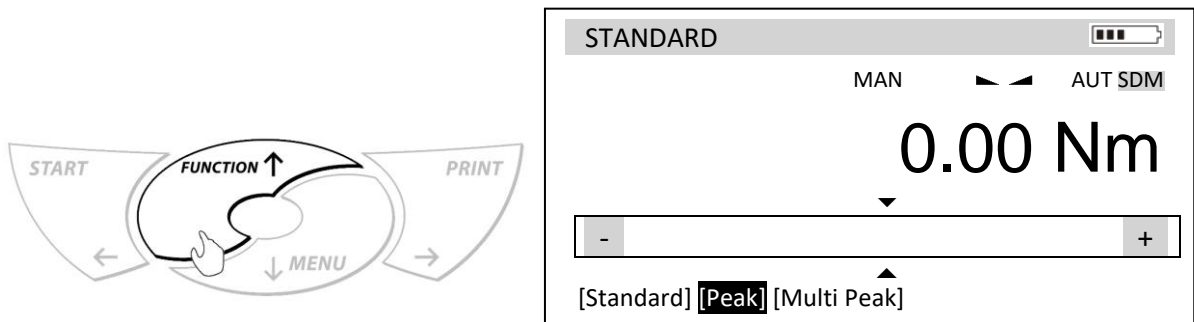

5. To select or change a unit of measure press the Unit / Clear button until a desired unit of measure is highlighted.

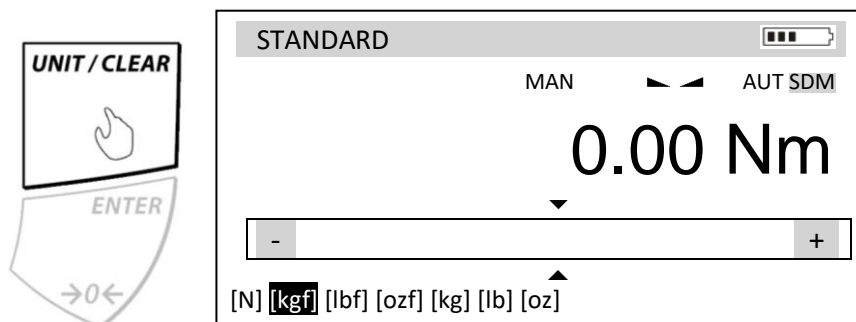

   
- Install the container or jar by placing it on the mounting rails. Adjust the clamping posts accordingly to the diameter of the container or jar. Turn the adjustment knob in the clockwise direction until the container is firmly secured in the fixture plate.
- Before taking a measurement zero the torque gauge by pressing the $\rightarrow 0 \leftarrow$ / ENTER key.

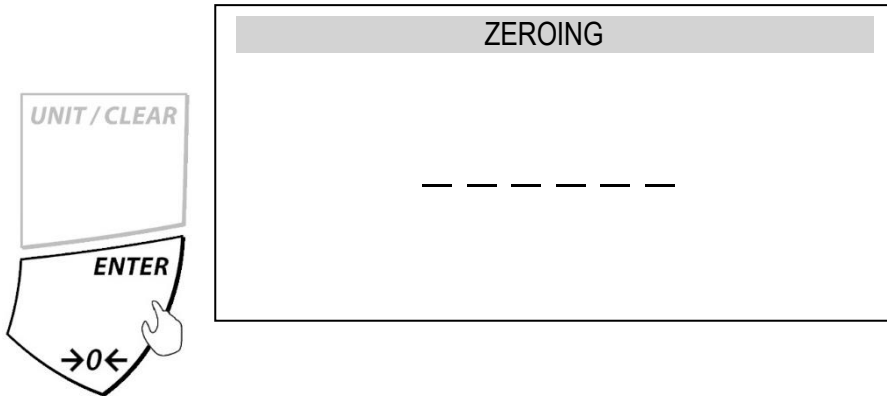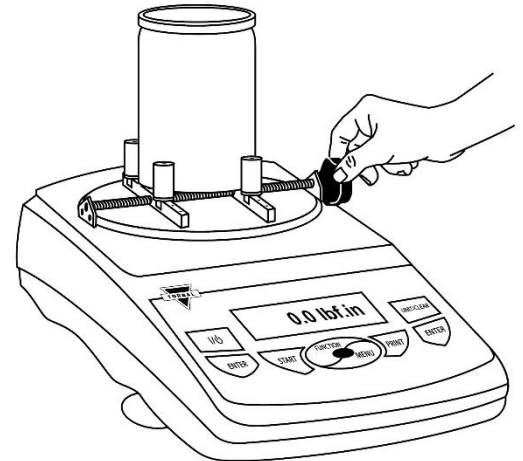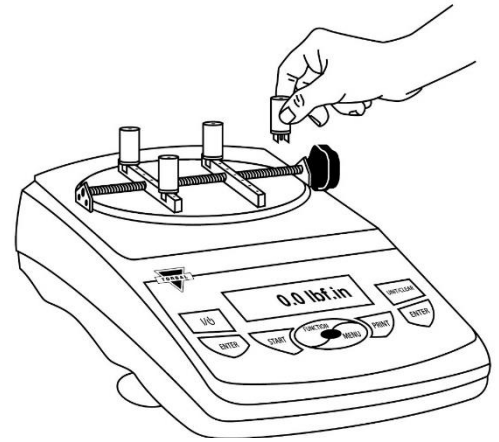

- To measure torque of an object, turn the container cap in the clockwise or counterclockwise direction. Observe the measurements recorded as the torque is applied.



 - Depending on the configuration and mode in use, measurements are captured automatically or with a press of the START key.

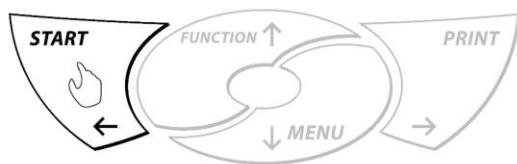

- To pause measurements, press the Unit / Clear key once. To clear and rest the measurement at any time press and hold the Unit / Clear key.

