




Counting and Dispensing Techniques

- 1** To count, dispense pills onto the tray in a scattering motion.

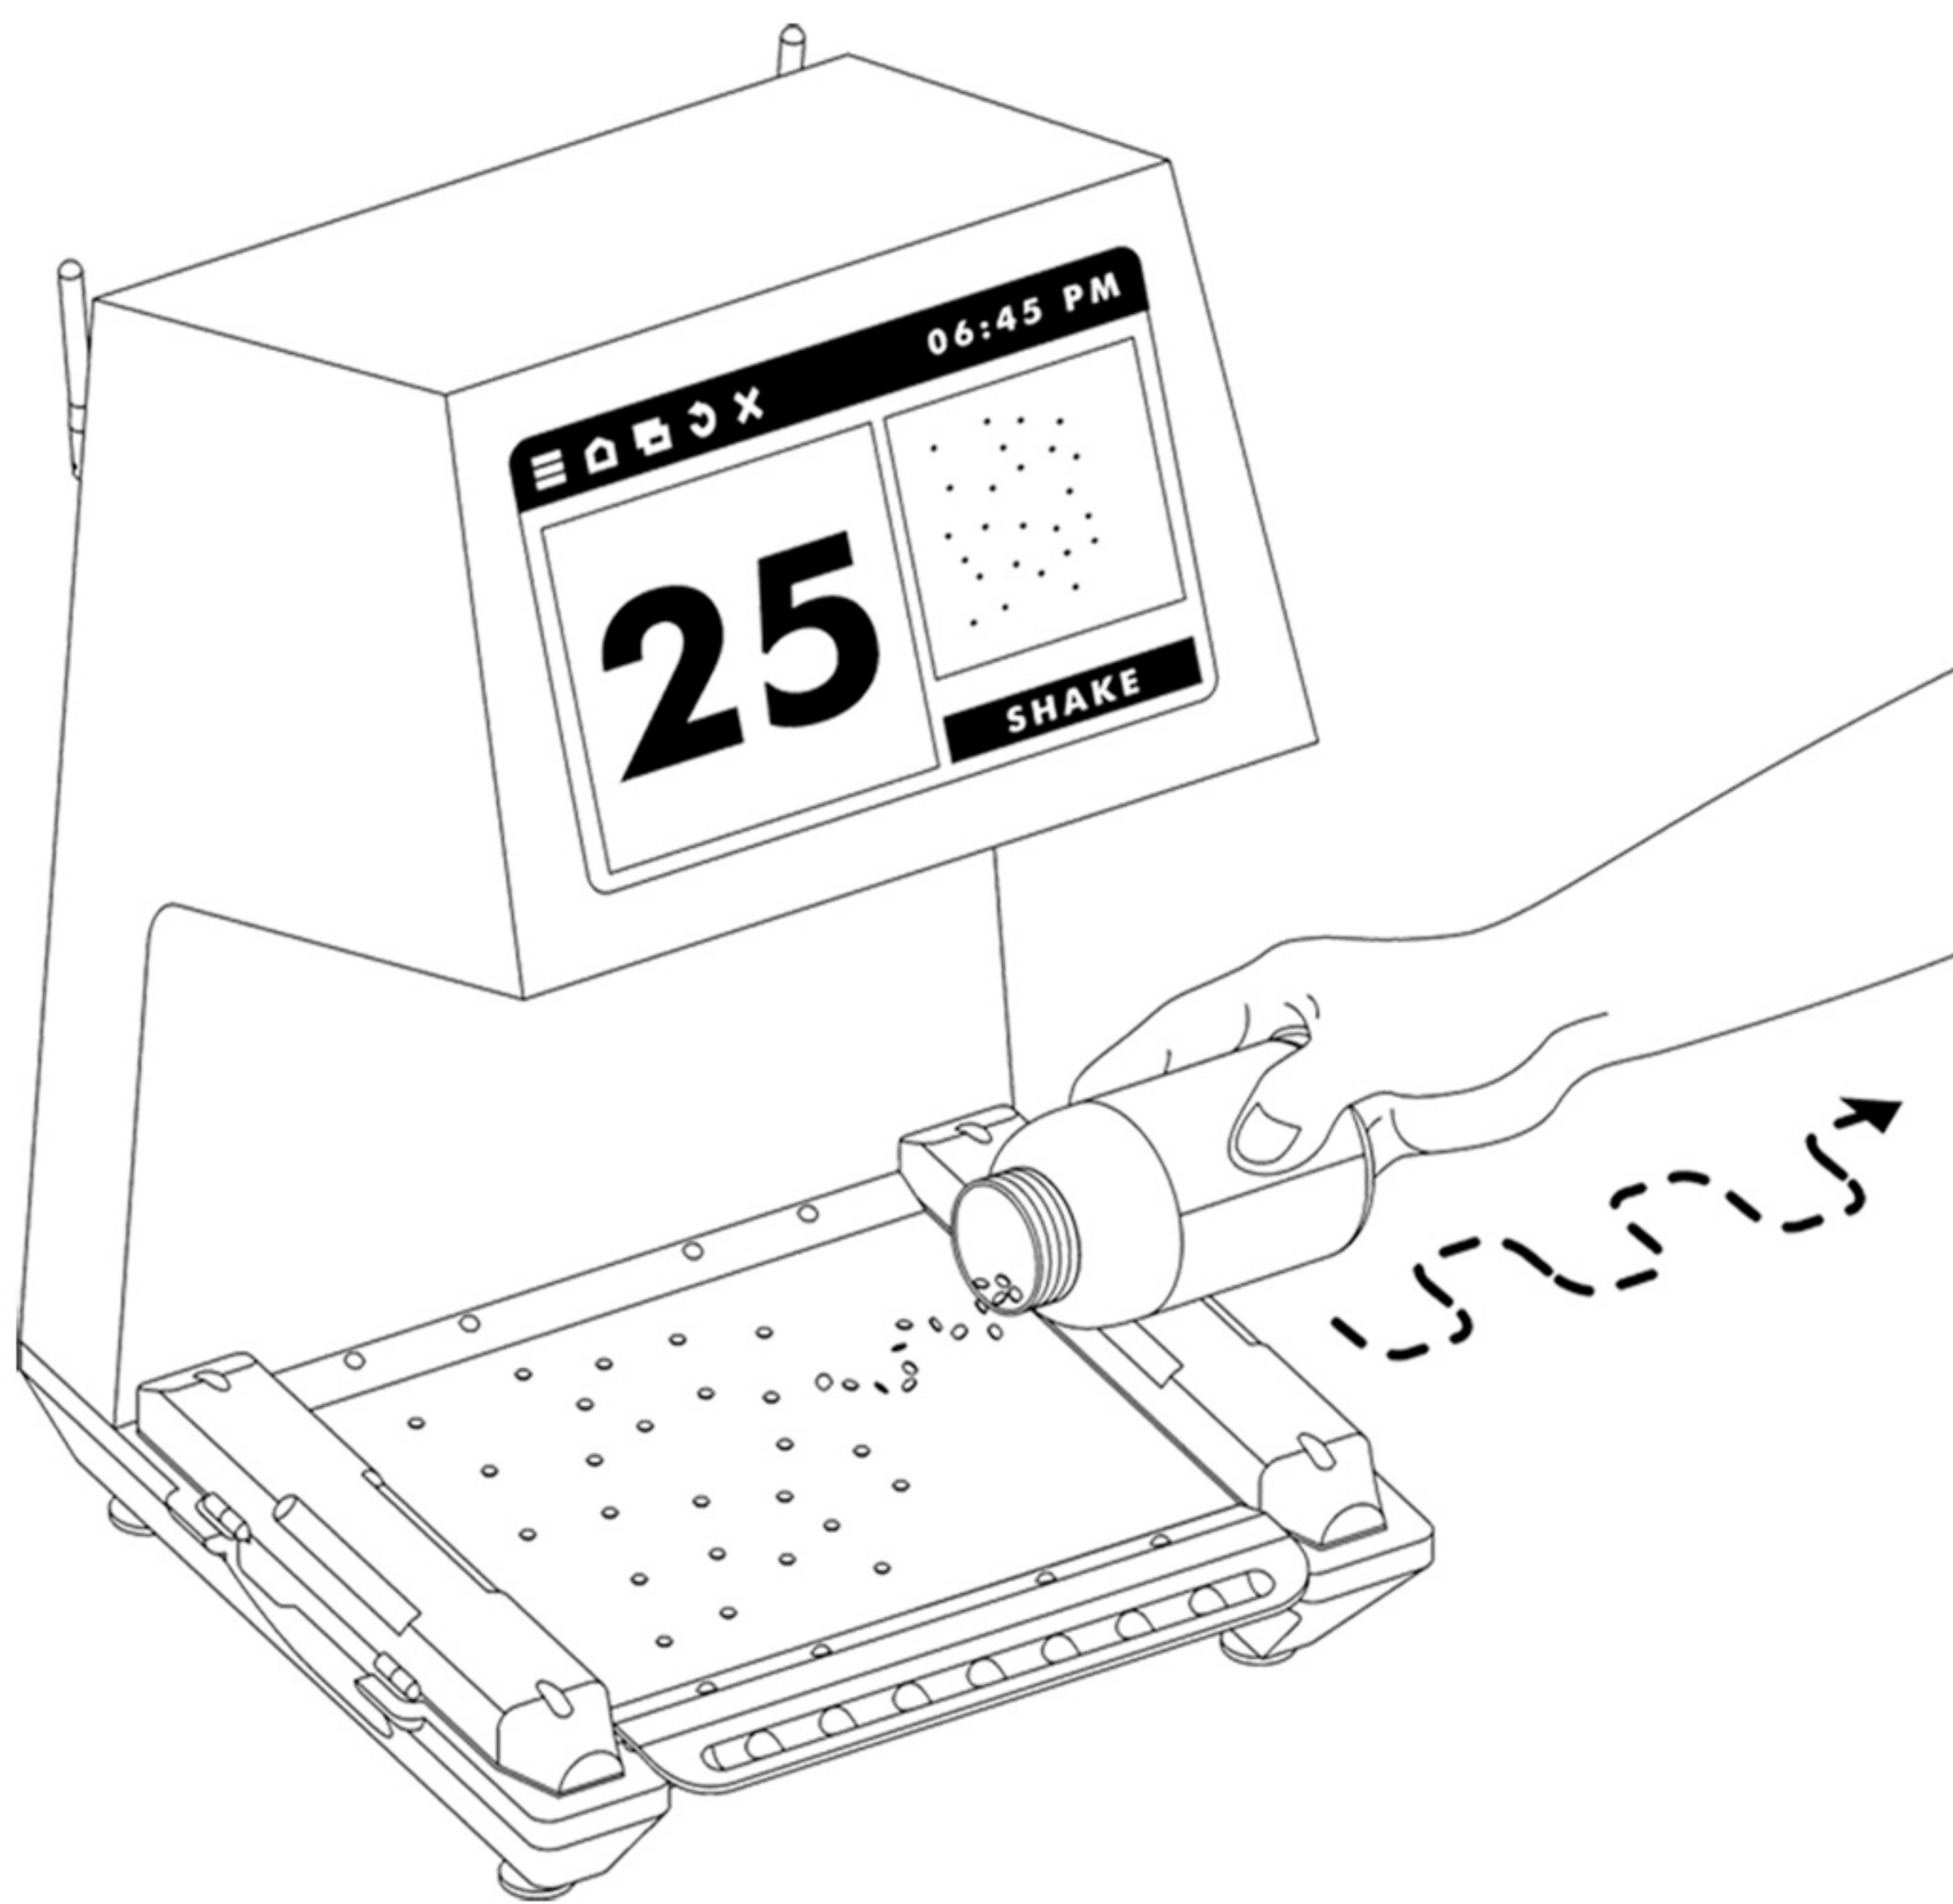


⚠ Caution

Do not dispense the pills into a single heap or tight cluster. For best results avoid exceeding a quantity of 100. Smaller pills can be counted in larger quantities. For inventory counts use the batching feature.

ⓘ Tip


Heaping or clustering the pills will slow down the counting process. If the pills form a cluster, press the shake button. The shaking intensity varies between different pill sizes.

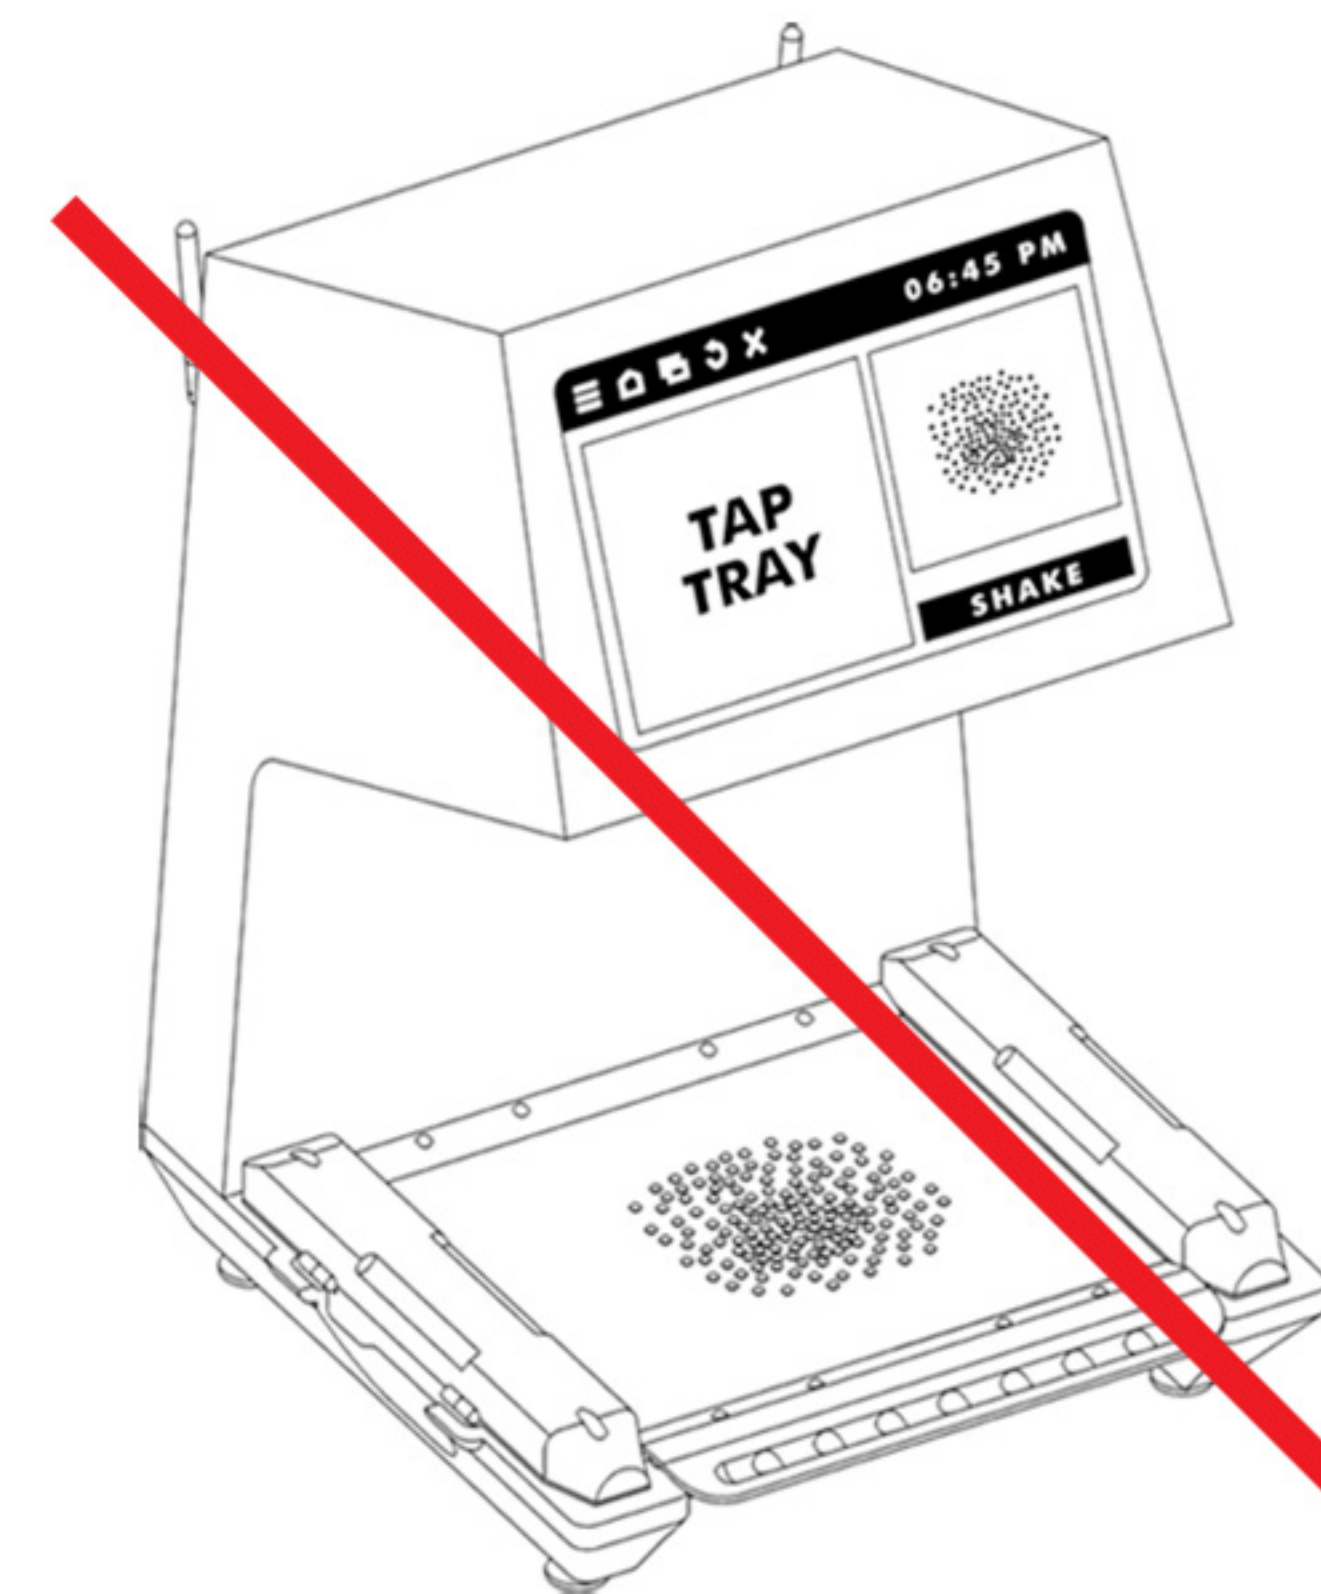


- 2** Once the pills are scattered on the tray, use the front tray handle to lift the tray up and down, and tap to assure pills spread away from each other.

ⓘ Tip

Tapping the tray is required to assure optimum accuracy. Perform this step even when a count result is displayed. If tapping the tray, or shaking, does not produce a count result, you may have too many pills on the surface of the tray.

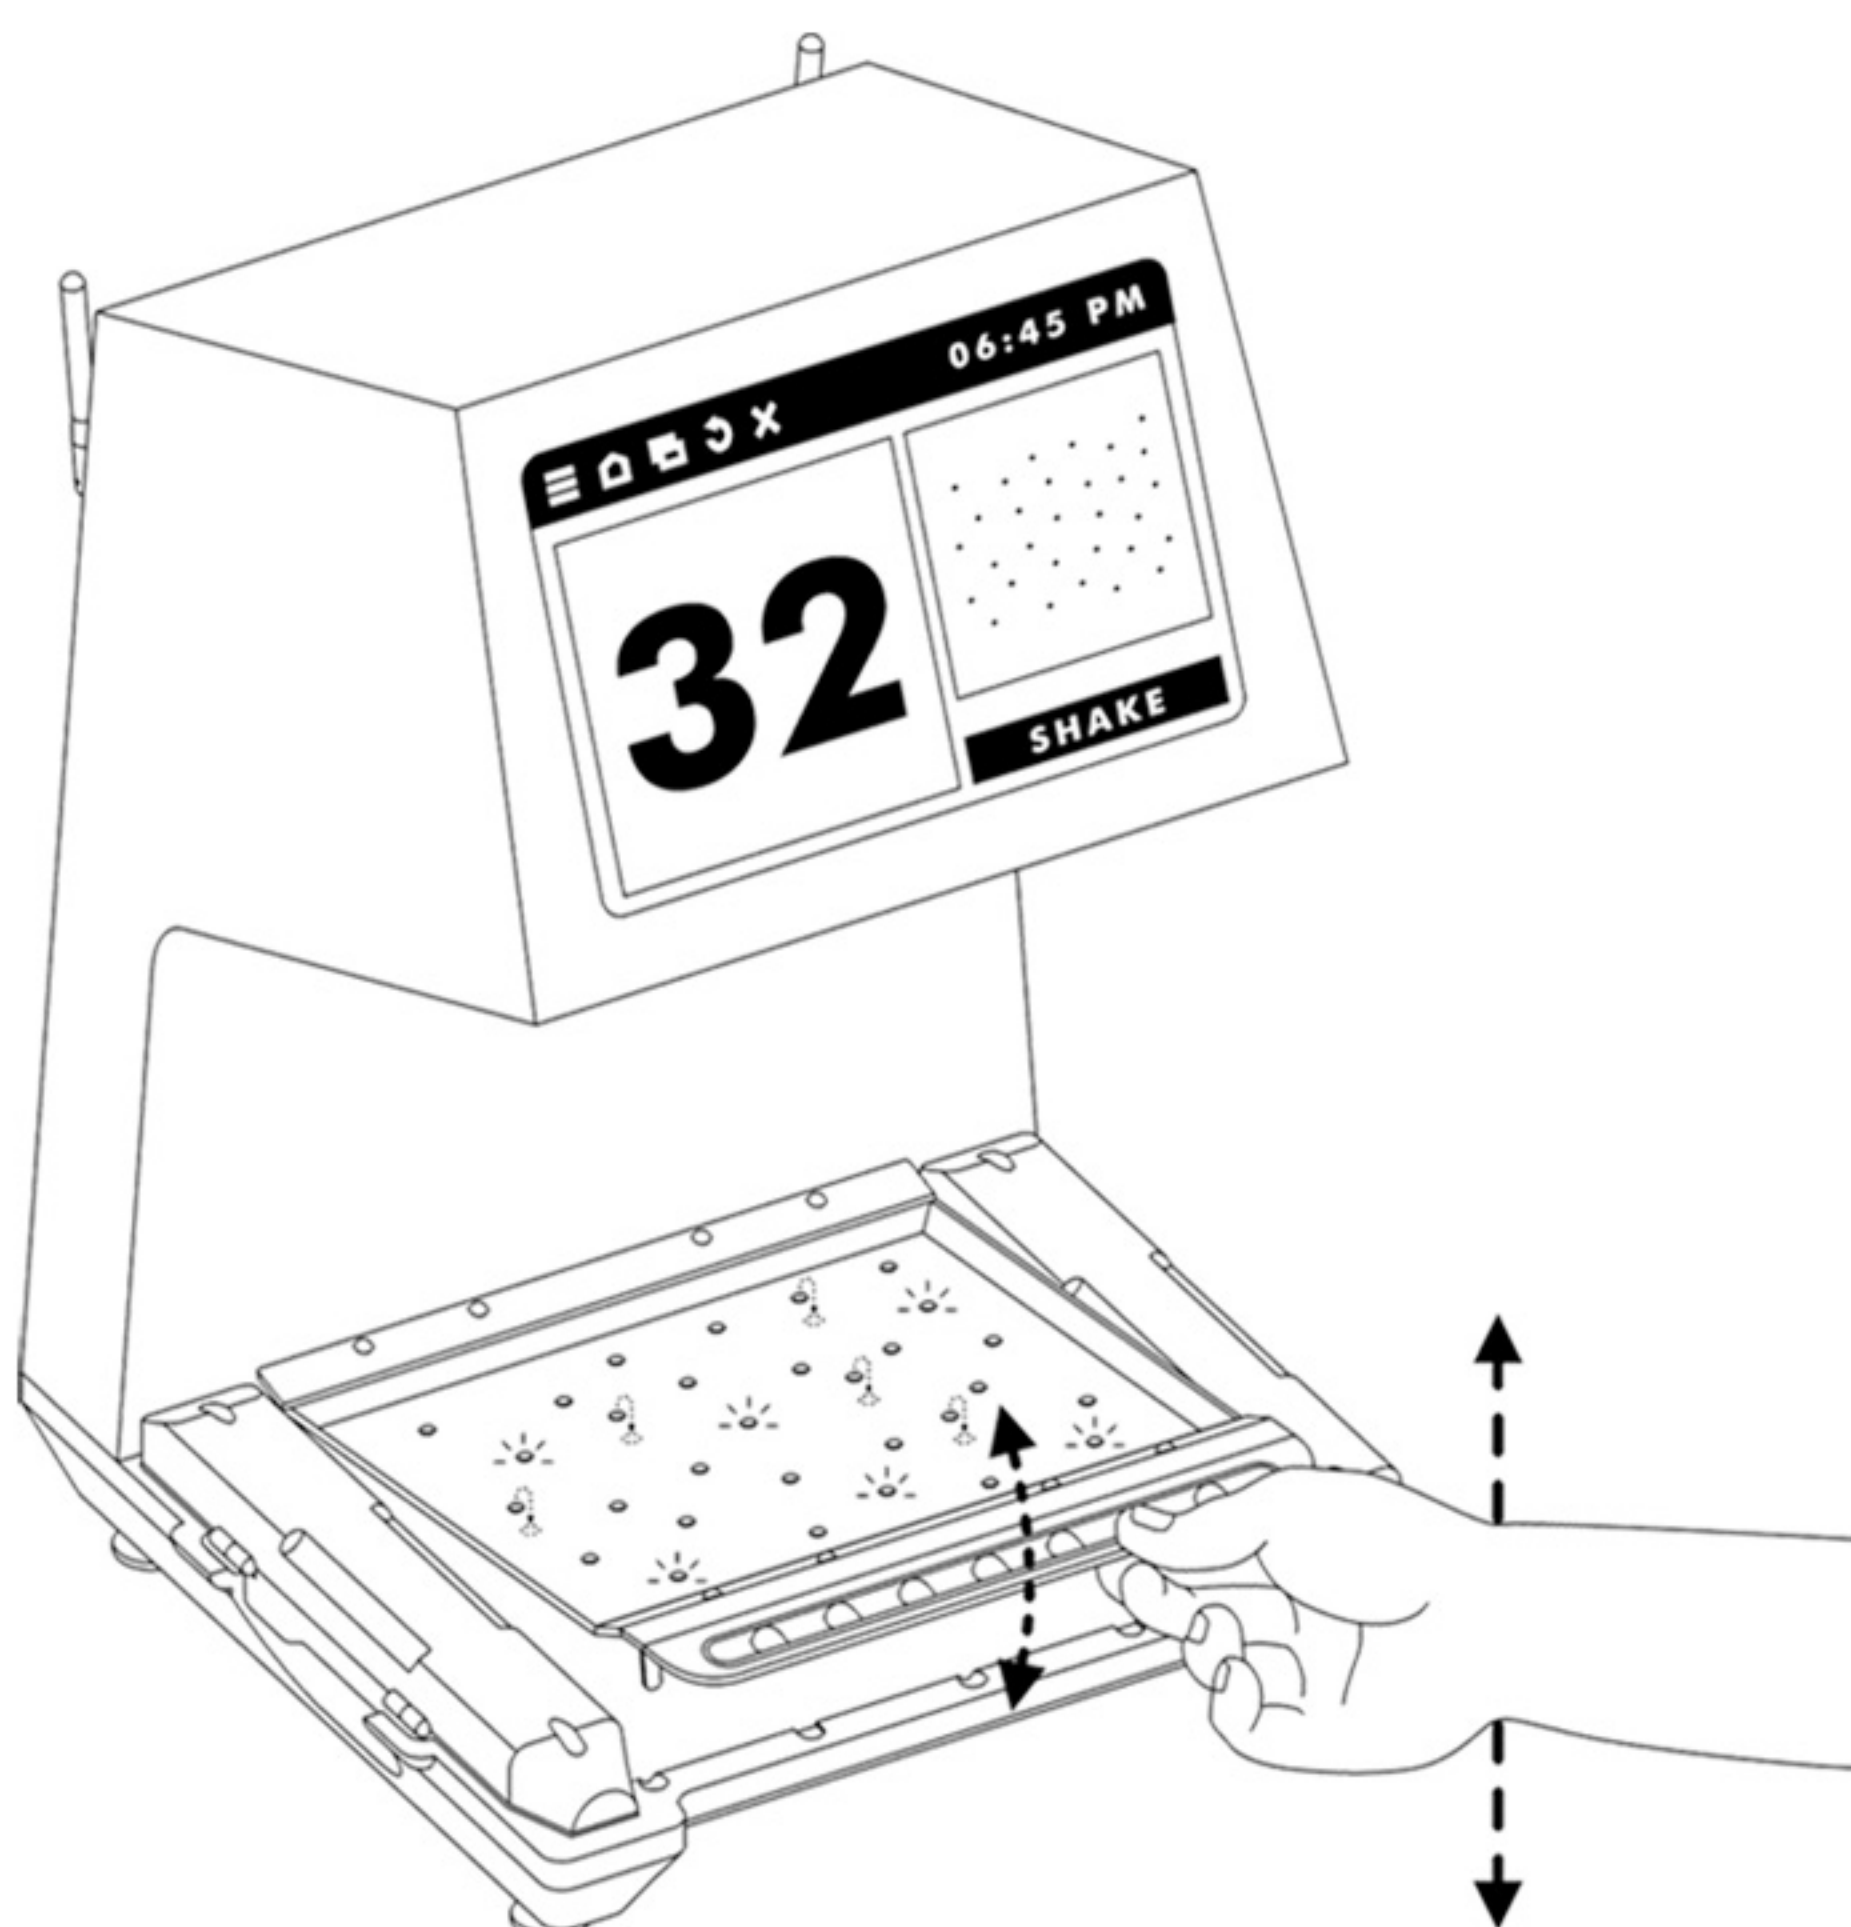


- 3** If more pills were dispensed onto the tray than needed, use the spatula to place the excess quantity into one of the dispensing tubes.

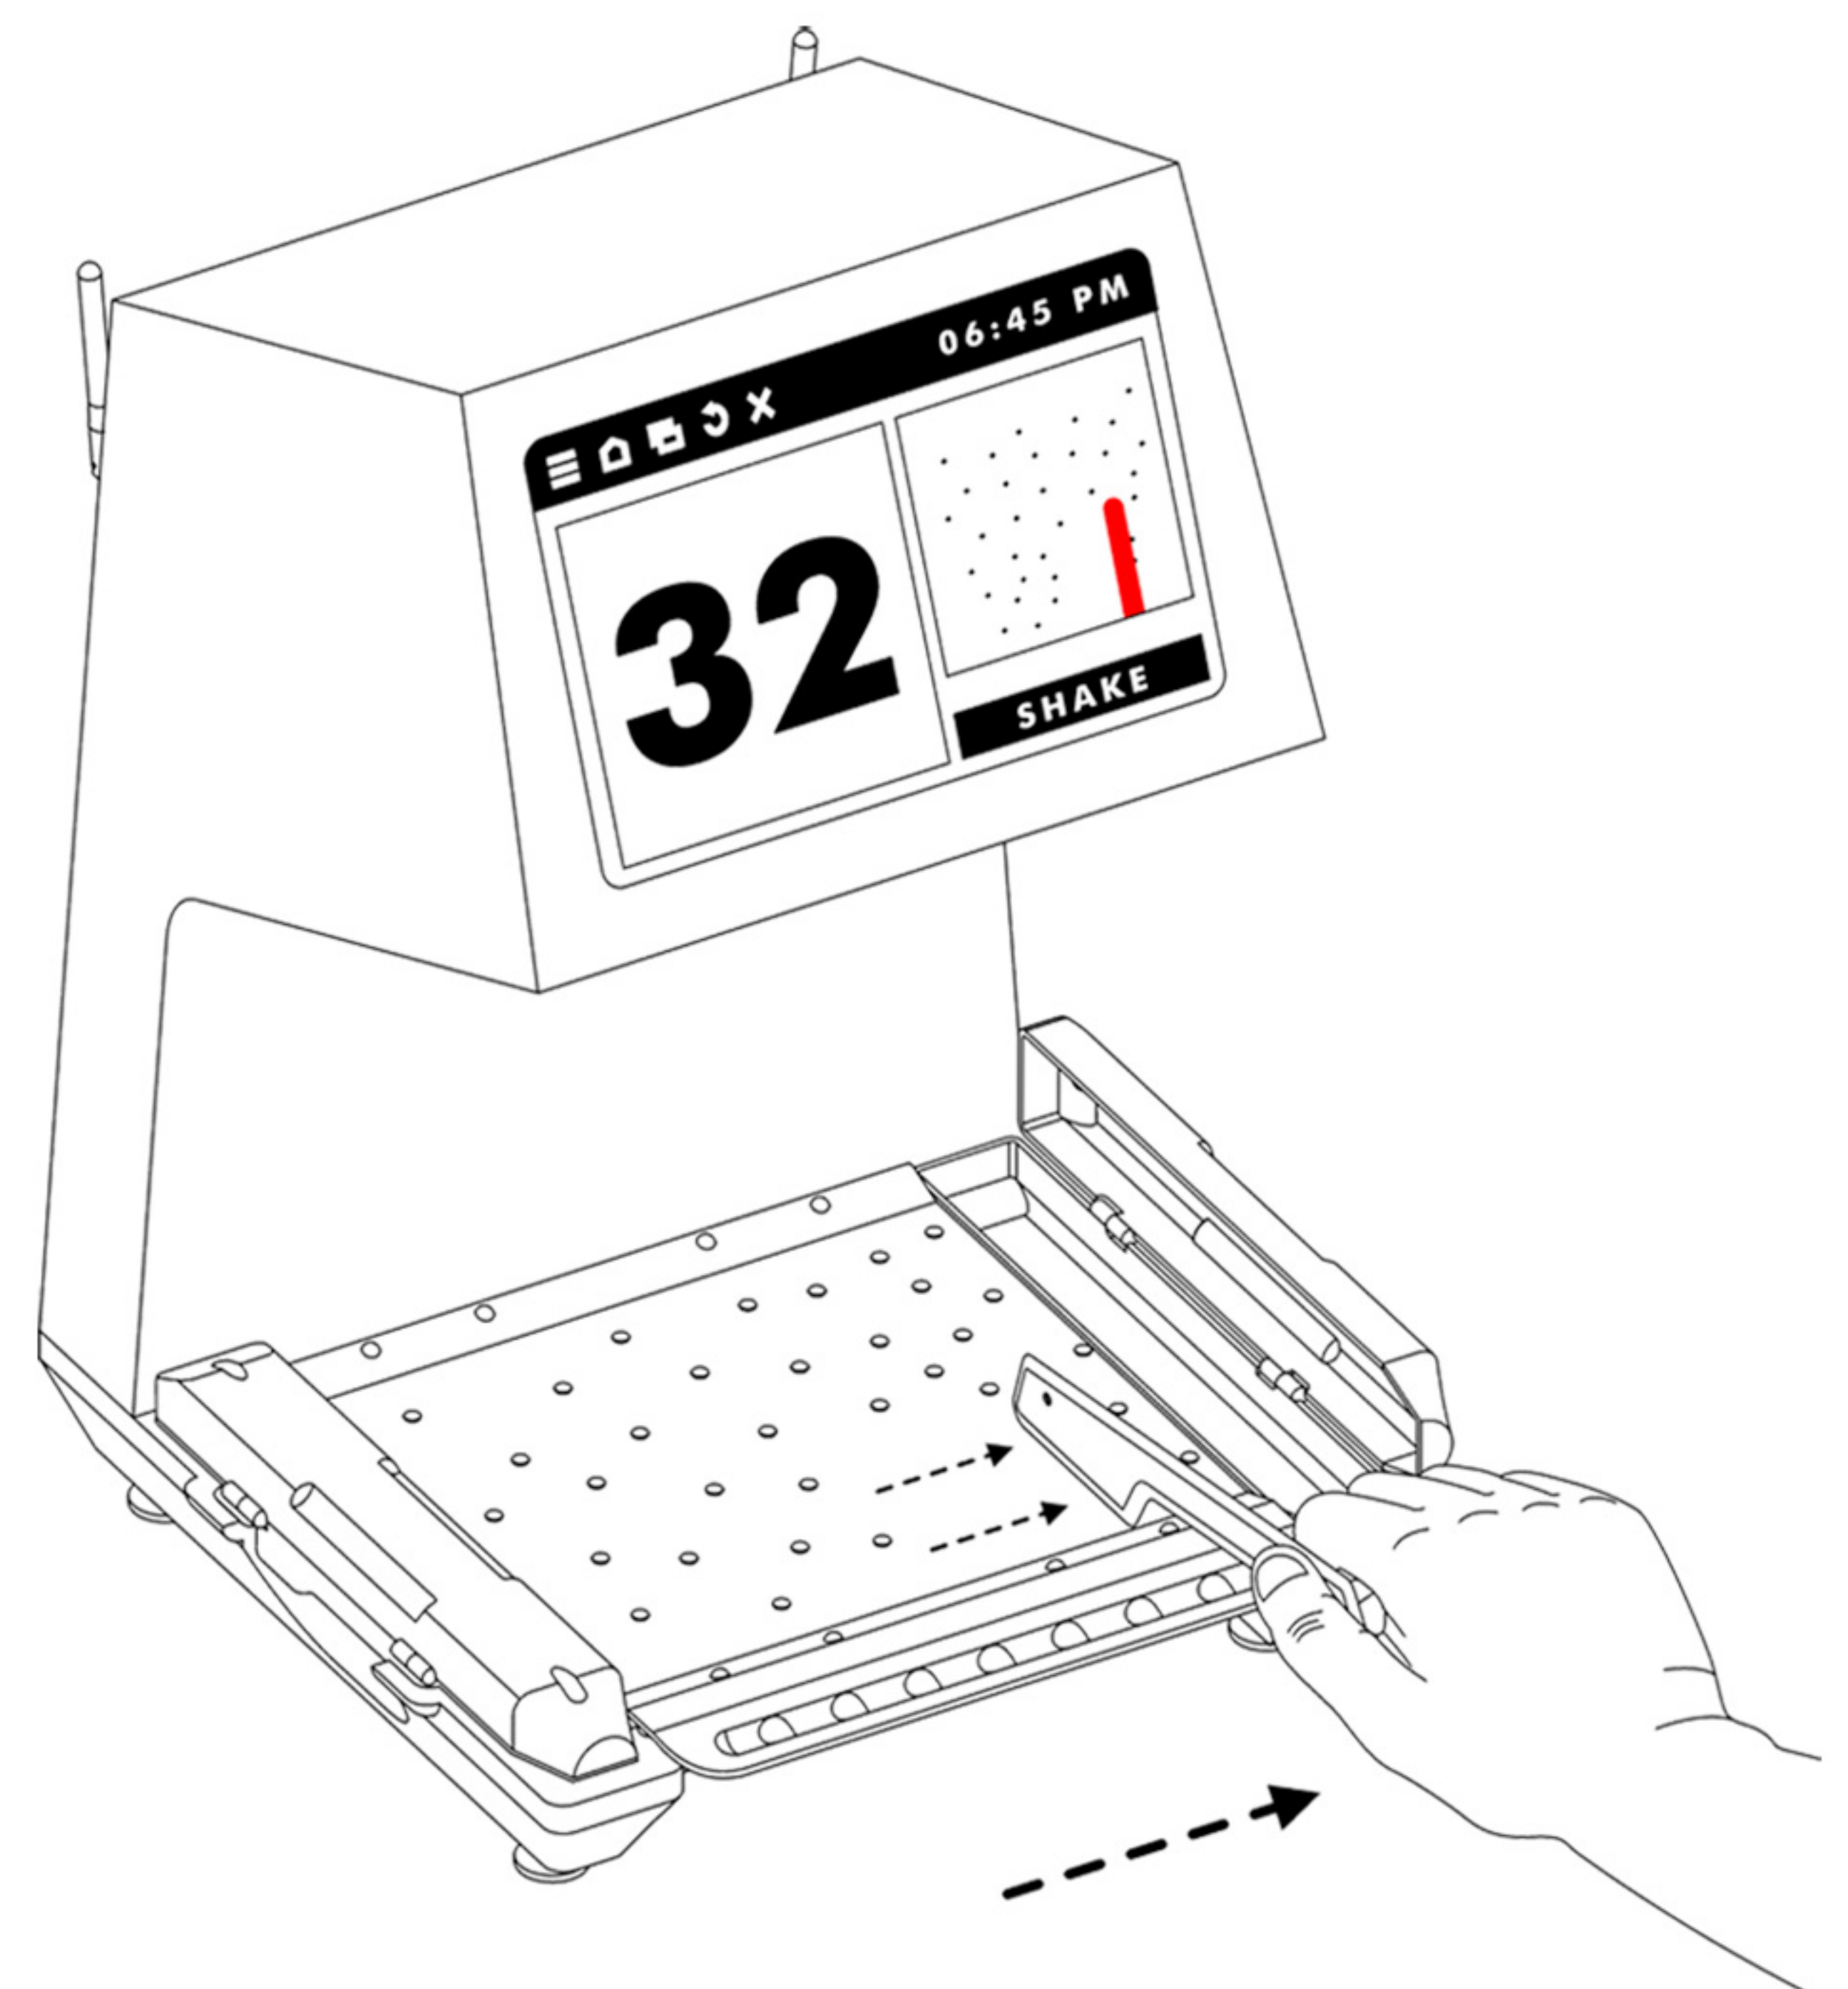




- 4** Transfer the excess quantity back into the supply bottle.

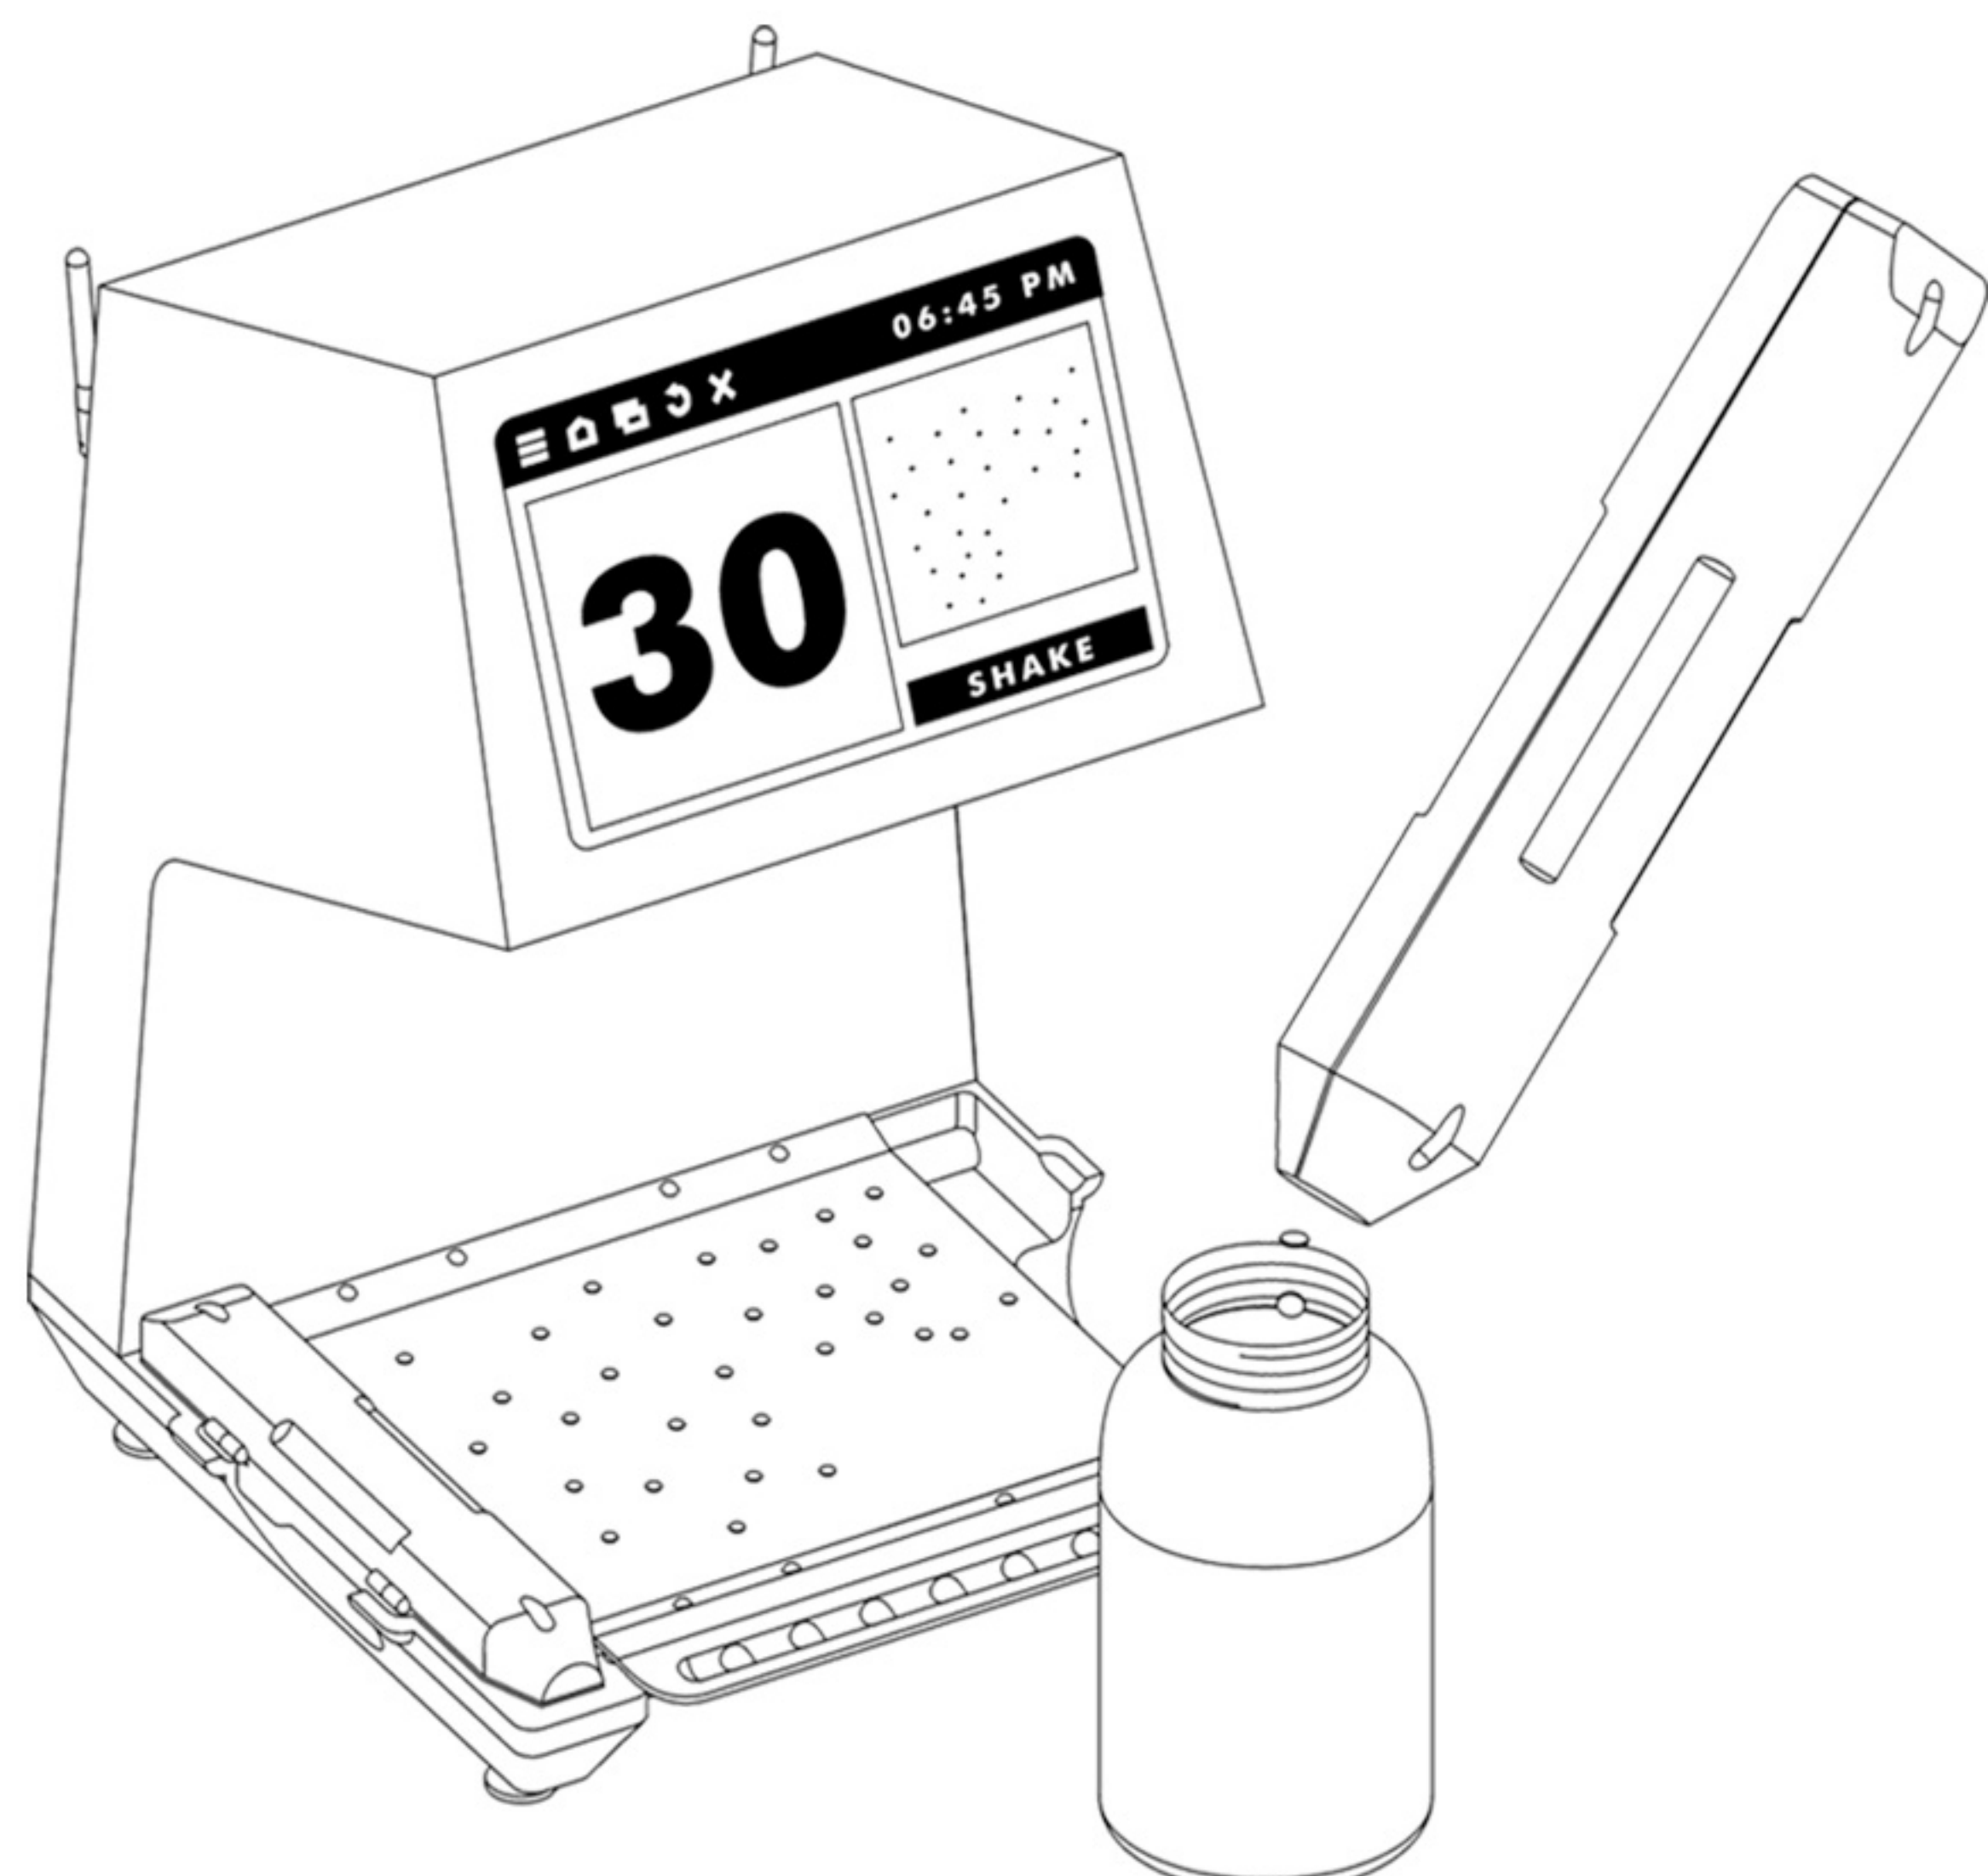


- 5** Confirm the count and tilt the tray to place the pills into the second dispensing tube.

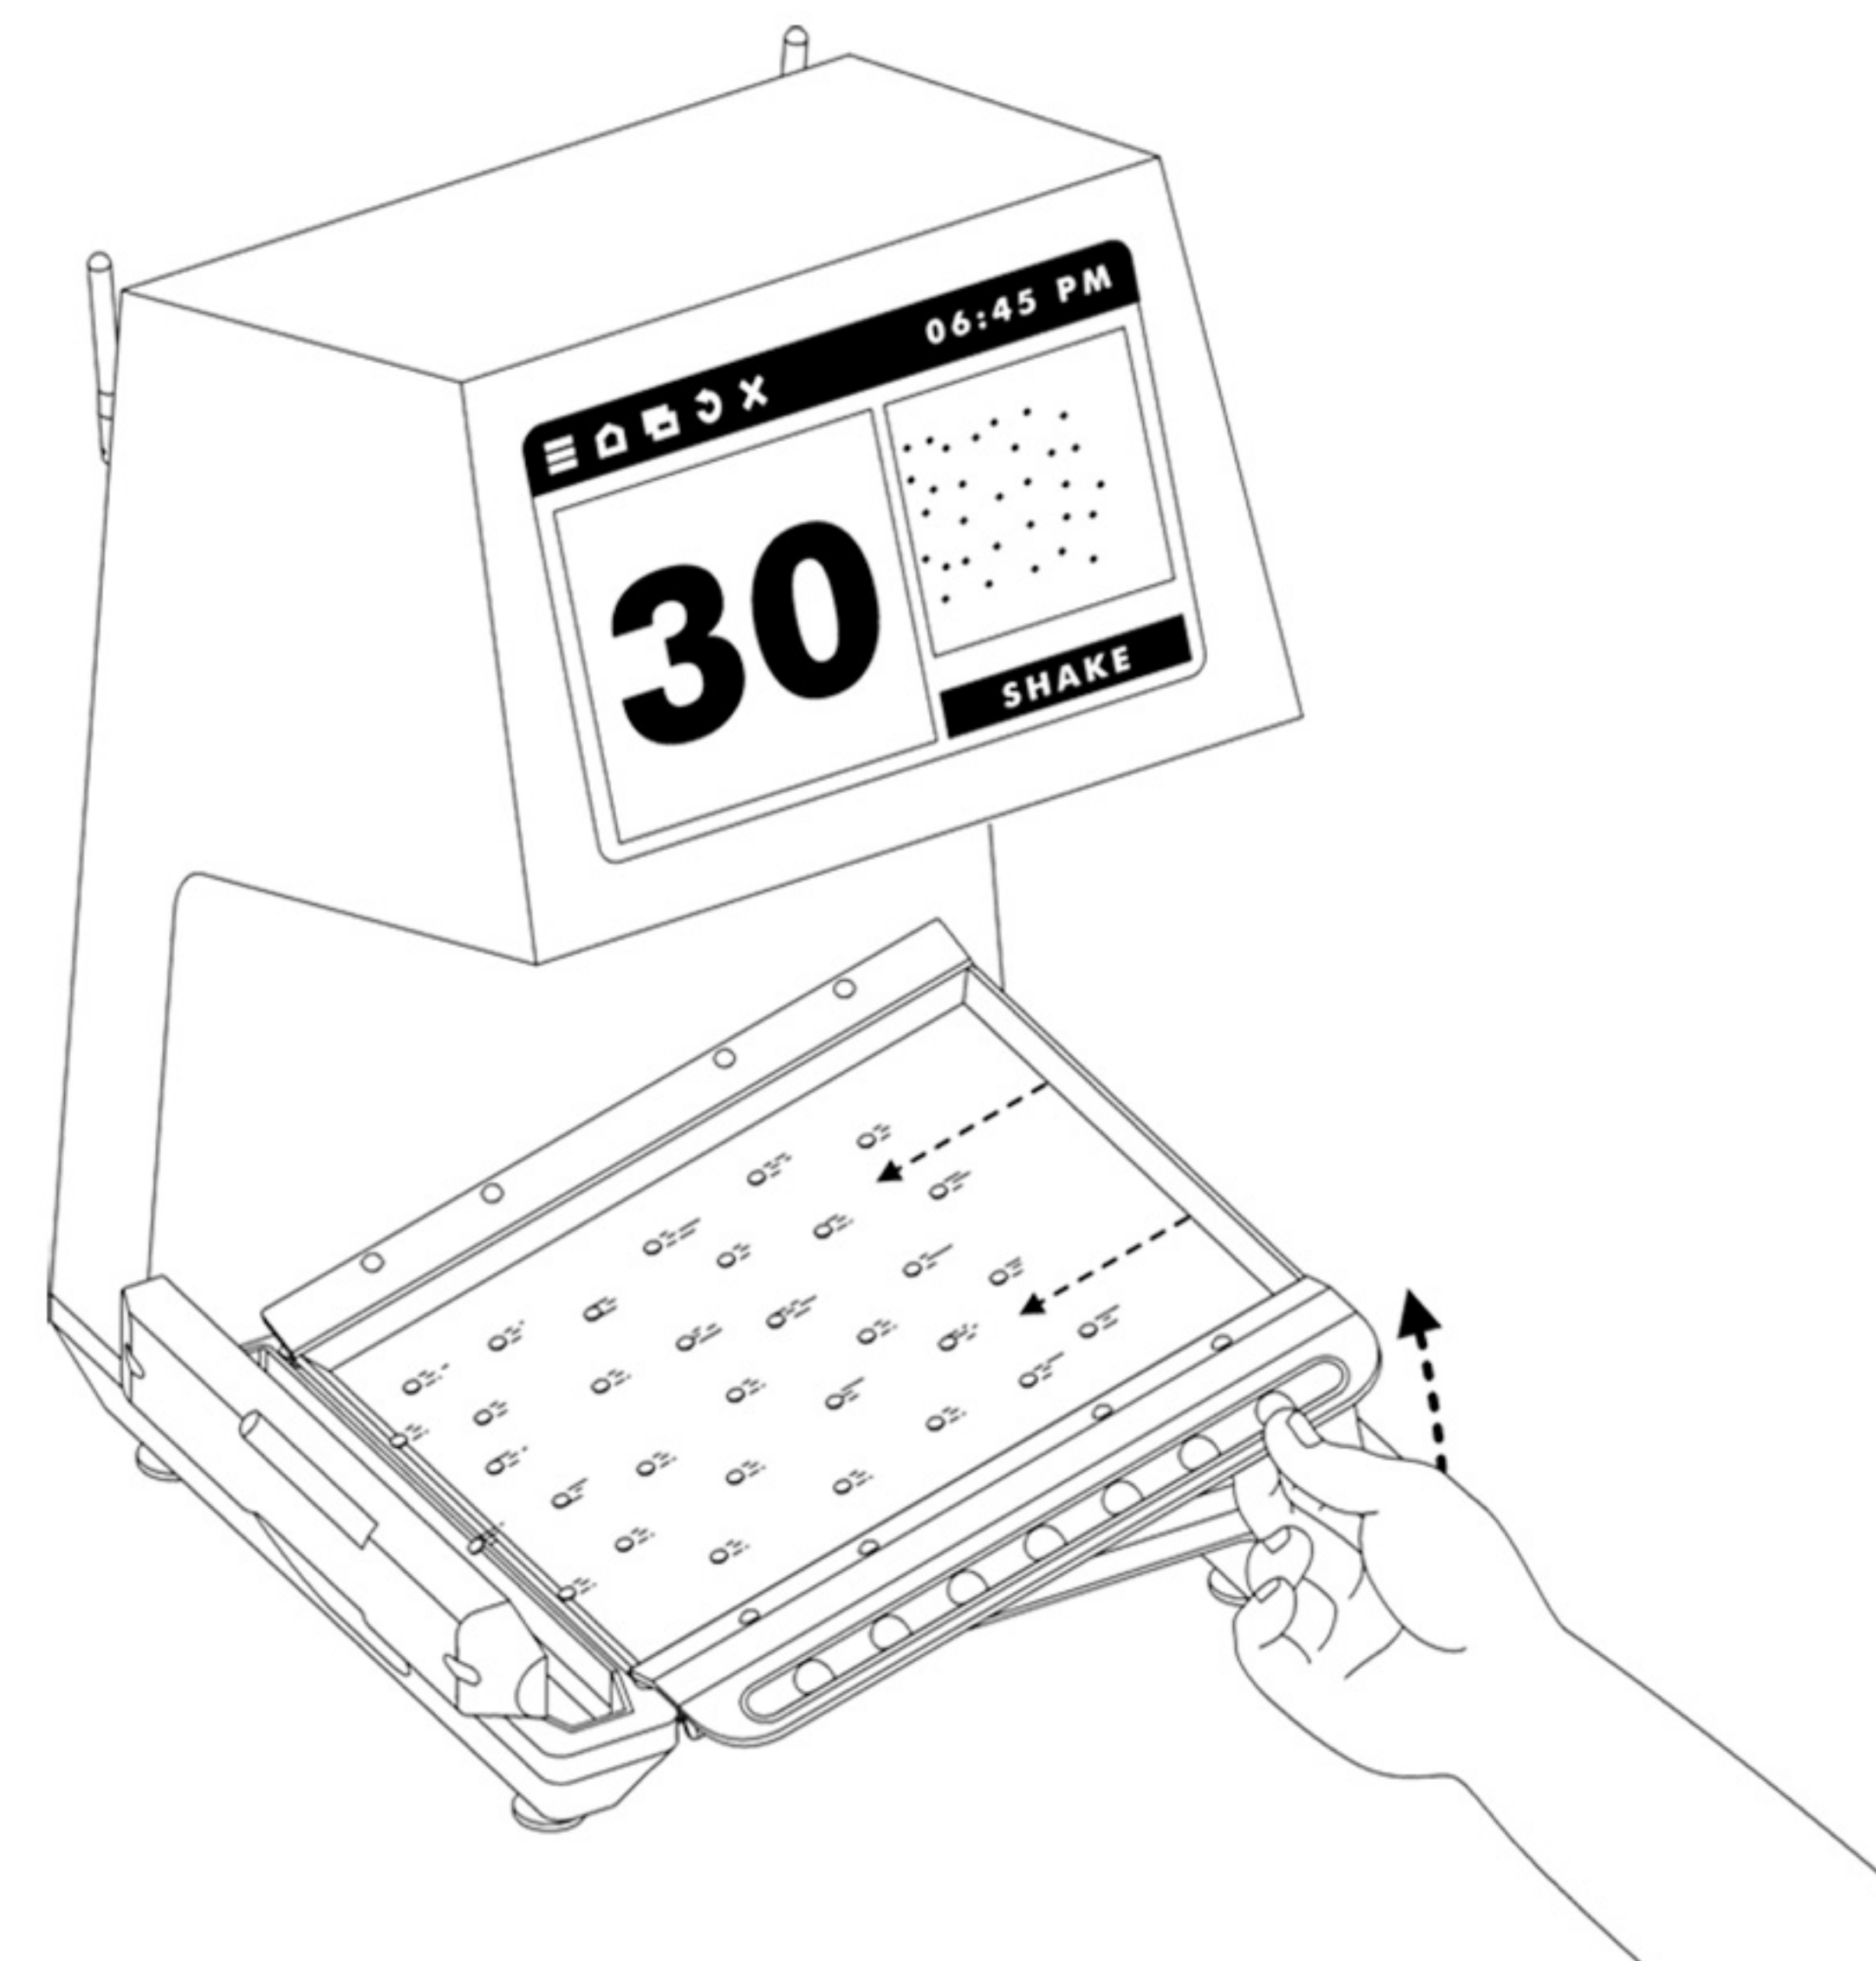

i Tip

If preferred, you can use the long edge of the spatula to sweep the pills from the tray into the dispensing tube.

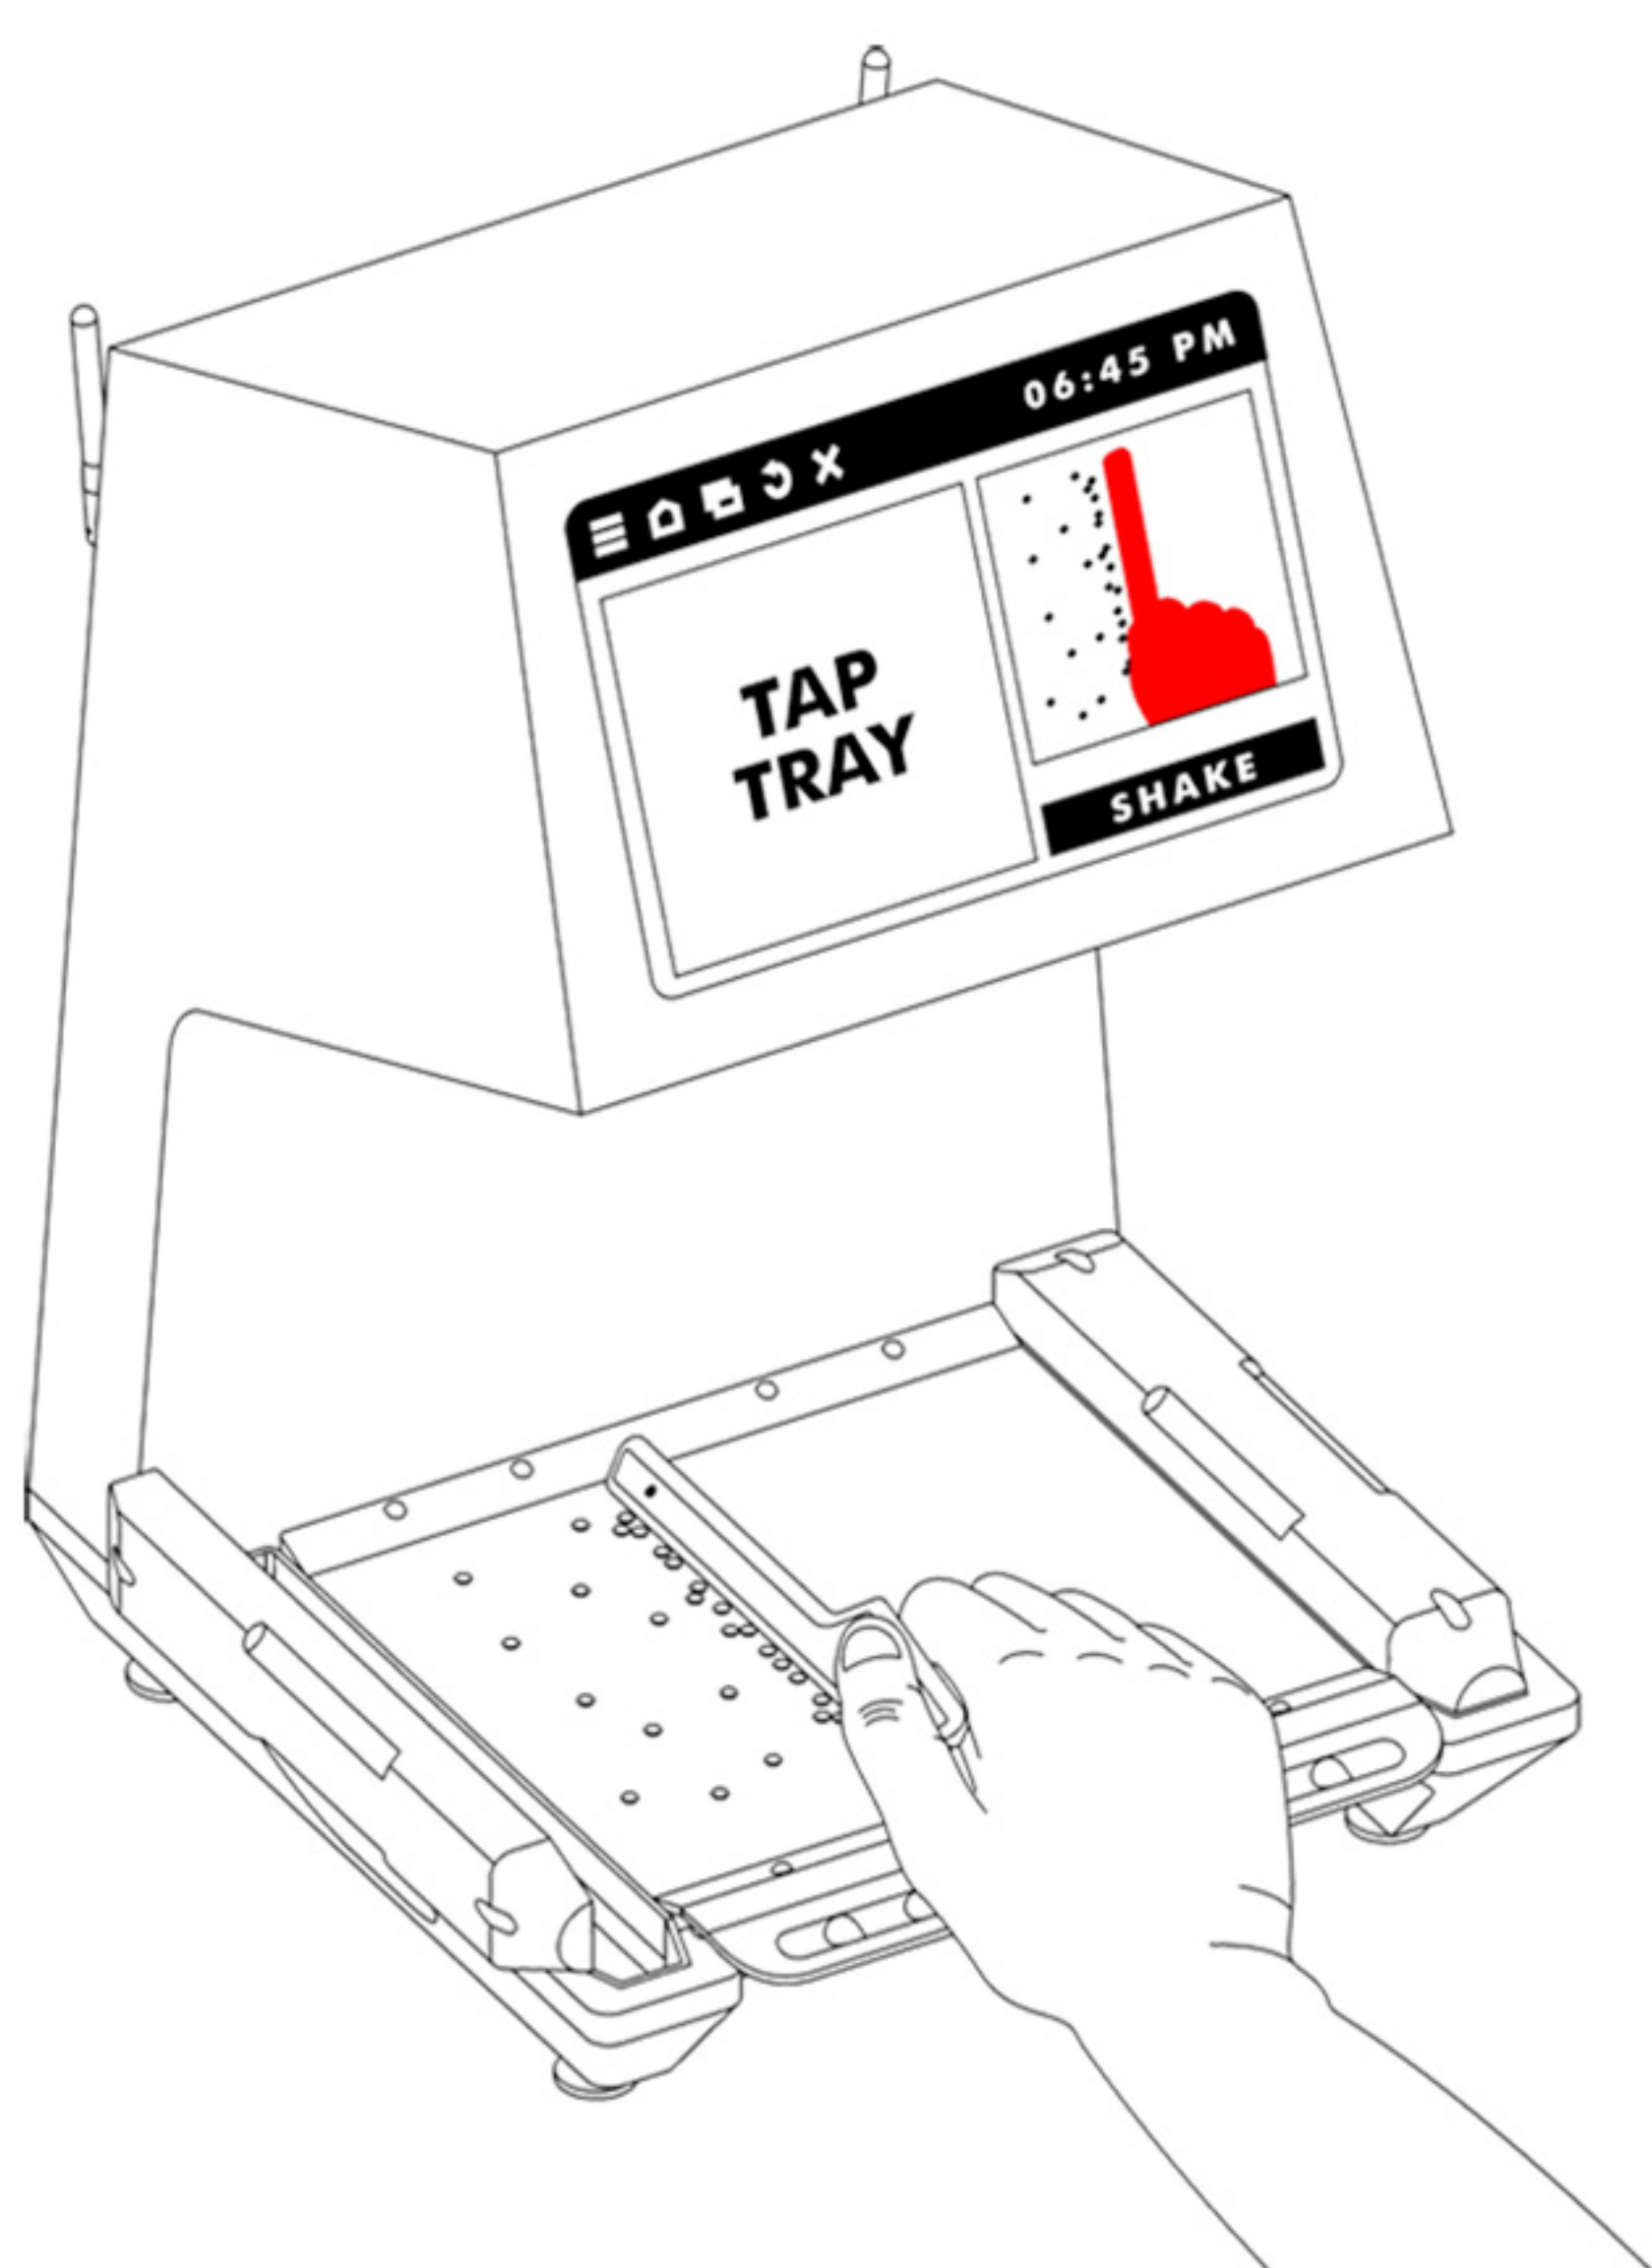

- 6** Transfer the pills to the patient's vial.

